

Display manual

Thank you for purchasing our product. Please check carefully the instruction before using.



Button

There are two buttons, Power  and Mode .

Usage

Long press Power ,  battery capacity, speed will be shown during riding. Trip(single distance), ODO(Total distance) can be checked under Mode. After turning on, it will turn off automatically if no input for 3 minutes. When the screen shows "CA 2 : 00", it means it will turn off in 2 hours.

Short press , the screen shows: TIME, TRIP, ODO, DST, VOL, CH 2 : 00. TIME means riding time; TRIP means single distance; ODO means total distance; DST means left distance (according to left battery capacity and riding situation); VOL means voltage of battery; CH 2 : 00 means counter down 2 hours for turning off (some display doesn't have CH)

Long press  button when screen shows TRIP, single distance will be reset.

Short press , speed level number will be flashing,

short press  button to change speed level, 1=slow, 2=middle, 3=high.

When the display turns on, long press , power off.

Specification

Press both  button and , the screen shows specifications:

P0, short press , screen shows P1, short press , will show P2、P3、P4、P5、P6、P7 ; They means : P0:set for diameter of wheel ; P1: set for under voltage point ; P2: set for pole number of motor ; P3set for speed test ; P4: set for kilometer or miles; P5 set for accelerator start; P6 set for cruise control ; P7 set for soft or powerful start.

When shows P0, short press , it will show diameter of wheel, you can change wheel diameter by pressing  button to add 1, or press  button to reduce 1. It will exit after several seconds.

When shows P1, short press , it will show the voltage of under voltage. For example, if show 315, it means under voltage is 31.5V. If want to change the under voltage, press  button to add 0.5, or press  button to reduce 0.5.

When shows P2, short press , it will show pole number of motors, press  button to add 1, or press  button to reduce 1.

When shows P3, short press , it will show 0 or 1 ; set for speed test , If shows 0 (original set) , it means speed test from hall motor. If shows 1, it means speed test from outside.

When shows P4, short press , it will show 0 or 1, set for kilometer or mile. When choose 0, kilometer, it will show Km/h; When choose 1, miles, it will show Mp/h ;

When shows P5, short press , it will show 0 or 1, it means two kinds of start. When shows 0, it means the scooter can start by press accelerator; when shows 1, the screen shows "PAS", it means that you can start the scooter by kick the scooter while pressing accelerator.

When shows P6, press , it will show 0 or 1, it is set for cruise control. When choose 0, no cruise control. When choose 1, you can set for cruise control.

When shows P7, it will show 0 or 1. When shows 0, it means the start is soft. When shows 1, it means the start is very powerful.

Error

When the scooter has an error, the display will show the error parts:

- Brake error 
- Motor error 
- Accelerator error 
- Controller error  etc.